







/ Standards

• IEC 60832-2

/ Use

The wing cotter key is used to remove the locking pins from the ball joints of insulator chains and their accessories.

Universal tip, rotating lug body and tip, made of corrosion protected metal.

/ Areas of activity



Electrical distribution



Transport



Technical sheet



/ Technical specifications

• Pole kind : Pole accessories

• Operating voltage (V): HTA (1 000 V to 50 000 V)

• Pole adaptators : Universal (U)

Technical sheet



Product reference	Dimensions (mm)	Accessory weight (kg)	Overall dimensions (Inch)	Accessory weights (lbs)
LW11-22-PM	120x70x85mm	0,35	4.7x2.7x3.3 in.	0,77
LW11-22-GM	165x70x85mm	0,45	6,5x2,7x3,3 in.	1,0