


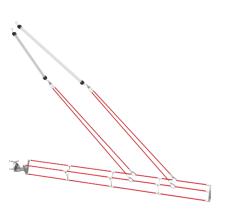



See online



#### / Use

The beam is used to move an operator and position him at his workstation.

Once on the beam, the operator must secure himself to the beam, to the exclusion of any other securing point. Hoists, ropes and ties used with the beam must be used exclusively for this purpose (sold separately).

#### / Areas of activity



Electrical distribution



Transport



# **Technical sheet**



### / Technical specifications

• Operating voltage (V): HTB (> 50 000 V)



# **Technical sheet**



Product reference	Tube(s) Ø	Total length (m)	Insulating length (m)	Weight (kg)
LW02-12-EB	39	3	2,80	17
LW02-12-EI	39	1,50	1,40	7
LW02-12-ET-150	39	1,50	1,40	7,8
LW02-12-ET-225	39	2,25	2	12,7
LW02-12-TIR-300	32	3	2,80	2,7
LW02-12-TIR-360	32	3,60	3,40	3